

Q500 Scour Policy

Crystal Weaver
Hydraulics Manager, INDOT

March 11, 2014



Agenda

- **Background**
- **Previous standards**
- **Determination methods**



Background

- Released in Feb. 2014 as Design Memo 14-02.
- Adds to IDM Ch 202-3.03.
- Adds additional guidance for determining Q500 for scour.



Previous Standards

- **Formerly, Q500 estimated by multiplying Q100 by 1.7.**
- **Very conservative for Indiana.**
- **Increases foundation costs.**



Determination Methods

- **Discharge from FEMA Flood Insurance Study.**
 - Should take precedence.




Determination Methods

- **Derived from coordinated discharge.**
 - Use Coordinated Discharge to find 10%, 4%, 2% and 1% EP for a drainage area.
 - Plot on a semi-log graph, with discharge on y-axis and inverse of return interval on x-axis.
 - Fit a straight line between the points, and use the equation to find a value at 0.002 (0.2%).



Determination Methods

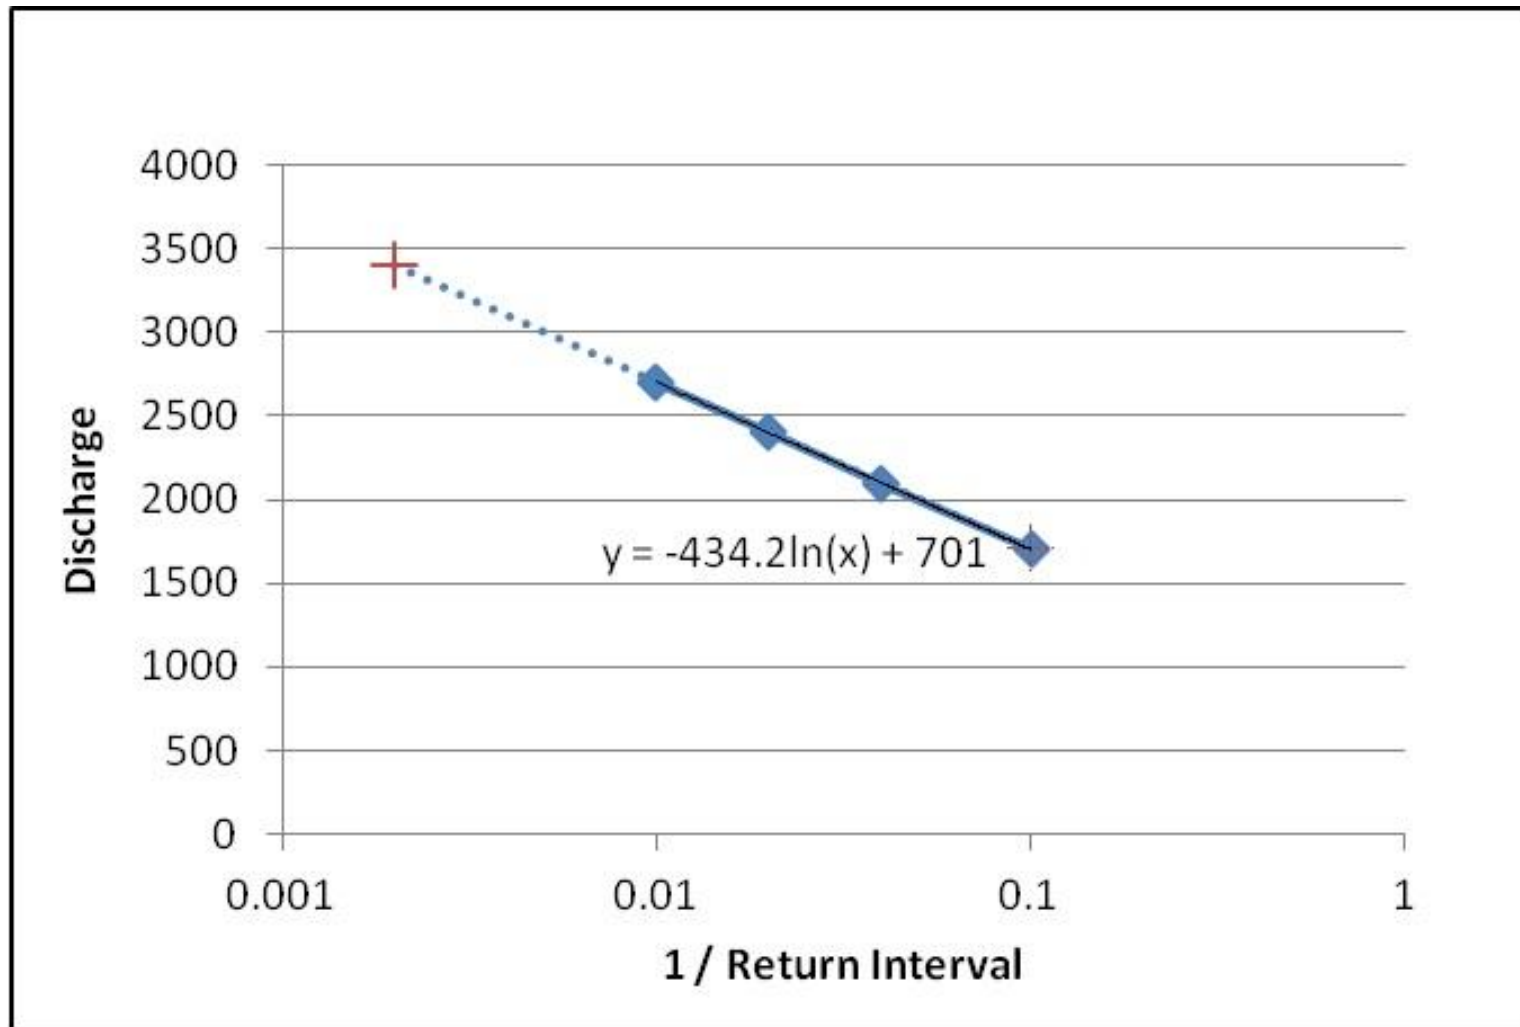


Determination Methods

- **Use a multiplier of the 1% Annual EP.**
 - Varies by region, based on watersheds.
 - Available as a printed map and a GIS shape file.
 - Ranges from 1.3 to 1.4 across state.



Determination Methods

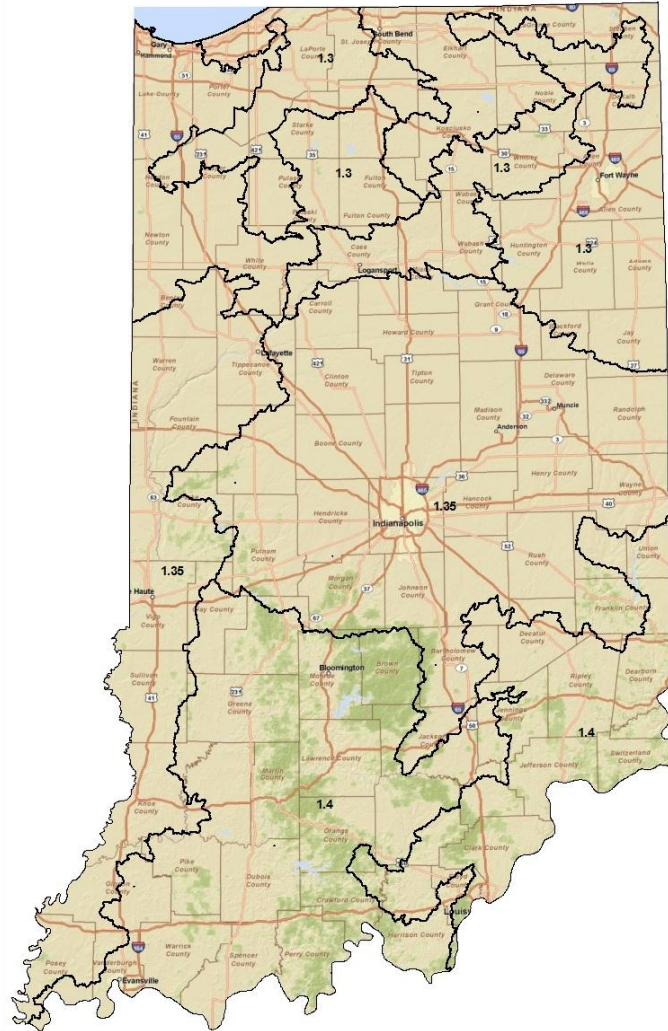

Conclusion

- **IDM Ch 202-3.03**
- **Don't use 1.7 as a multiplier!**
- **Three options for estimating Q500.**
- **Seriously, don't use 1.7 as a multiplier!**



Questions?

